


How to fit a new spring on your Disklok™




Remove the black plastic cover from the end of the Disklok arm with a firm pull.

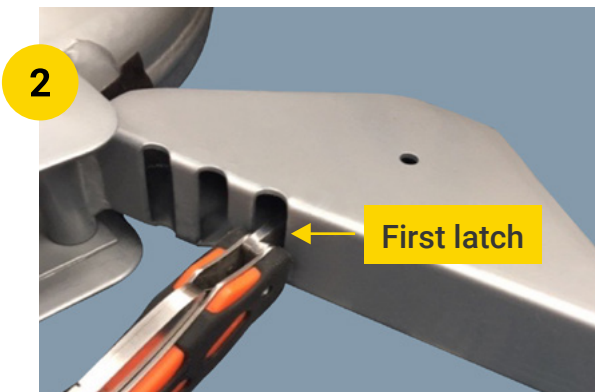

Insert something rigid in the first latch on the arm, for example a screw driver or tool, as illustrated in the photo.

This will sit behind the spring mechanism and stabilise it when you come to tighten the screw at the next stage.

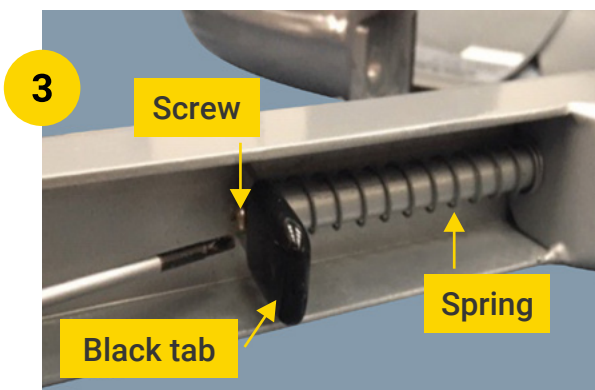

Unscrew and remove the black tab, replace the long spring and reattach the black tab into position. Having a tool in the arms first latch (*previous step*) makes it easier to screw the tab back into position.

Place the black plastic cover back onto the arm of the Disklok.

Please contact us if you have any questions.
aftersales@disklokuk.co.uk



+44 (0)1257 792111
sales@disklokuk.co.uk
DISKLOKUK.CO.UK